

XTP601 Series

Oxygen Analyzer for Safe or Hazardous Areas

A robust, linear and stable oxygen analyzer for measurements in gases such as hydrogen, nitrogen, biogas, or carbon dioxide. The sensor is housed in a rugged IP66 casing, making it suitable for a wide range of applications. When supplied with flame arrestors, the analyzer becomes explosion-proof and certified for use in hazardous areas.



Highlights

- General purpose or ATEX, IECEx, cCSAus, TC, TR & Ex hazardous area certified models.
- Ranges available: 0–0.5% up to 0–50% & 20, 80 or 90–100%
- Touch-screen display allows calibration or adjustment without the need for a hot works permit
- Intrinsic error (accuracy) is better than 1% full scale
- Zero span stability better than 0.25% of span per month
- Outputs include RS485 and two 4–20mA (following NAMUR NE 44 standard).
- Low cost of ownership due to minimal maintenance and no consumable parts

Applications

- Monitoring inert blanketing gases for hydrocarbon processing
- Inert gas for pharmaceutical or chemical industries
- Biogas, waste, landfill and digester plants
- Furnace gas control in steel industry
- Catalyst regeneration
- N₂ generators
- O₂ generators

XTP601 Oxygen Analyzer For Safe or Hazardous Areas

When a process oxygen application demands high accuracy and stability, along with low maintenance cost; paramagnetic oxygen technology is usually preferred. If, in addition, the application calls for a rugged and reliable, corrosion resistant analyzer, the thermo-paramagnetic principle of Michell's new XTP601 series makes it the instrument of choice.

The XTP601 series oxygen analyzer from Michell Instruments is designed to measure the percentage of oxygen in process gases. Using thermo-paramagnetic technology, the sensor is reliable and highly stable. The XTP601 is housed in an explosion-proof case and is rated ATEX Zone 1 for use in hazardous areas. For installation in non-hazardous areas, a general purpose version is available.

Features

Excellent accuracy

Oxygen measurements are highly susceptible to pressure variations because they are generally based on the partial pressure of oxygen. For a non-corrected analyzer, a 1% change in atmospheric pressure will result in a 1% change in the reading. The XTP601 has barometric pressure compensation fitted as standard and is ranged specifically to customer's needs to offer the best accuracy where it matters. For instance, in a 0–1% range the XTP601 is accurate to $\pm 0.02\% \text{ O}_2$.

Higher sensor stability reduces calibration costs

The sensor in Michell's XTP601 analyzer largely eliminates thermistor drift associated with other comparable devices, improving the stability of the measurement. This allows longer calibration intervals and reduces both labor and consumable costs.

Reliable long-term performance

In some installations, such as offshore or on board oil tankers, the movement and vibrations present could affect the moving parts of other kinds of sensors. The thermo-paramagnetic sensor has no moving parts, making it ideal for these applications.

Non-depleting technology

The sensor does not require routine replacement and is not poisoned like electrochemical cells. This will save downtime and maintenance costs. The cell performance is consistent and does not drift as it is not consumed by the process.

The non-depleting sensor reduces service intervals and no regular replacement of cells is required. The casing unscrews to allow for easy access to the sensor, enabling maintenance of the modular components to be carried out quickly and efficiently.

Easy installation with local display for use in hazardous areas

The XTP601 provides two 4–20 mA outputs and is housed in a robust and weather-proof casing, allowing the analyzer to be placed at the point of measurement.

The closer the analyzer can be installed to the sample point, the better, for many reasons. These include, faster overall speed of response (for safety), less sample line or cabling (saves cost) greater choice of installation points (flexibility). Also having a local display does not require two operators (or walking back and forth to the control room) for maintenance or diagnostics.

External sensor input

The unit has the facility to accept a 4–20 mA signal from an external source such as dew-point sensor, pressure transmitter, temperature probe, or user-defined sensor, and display it on the screen. This saves the cost of buying and installing an external display for another parameter that only requires occasional visual inspection.



Chemical plant

Technology Thermo-Paramagnetic Sensor

Oxygen is a paramagnetic gas, which means that it is attracted by a magnetic field. This magnetic susceptibility is much greater for O_2 than that of most other gas molecules and therefore this physical property is ideal for the determination of the level of oxygen in a wide range of background gases.

The XTP601 series is a thermo-paramagnetic oxygen analyzer where the combination of paramagnetic and thermal conductivity technology is exploited to accurately measure oxygen. The instrument is very stable which gives the user confidence in the measurement. This is important in safety applications such as blanketing of vessels or reactors in chemical plants.

In addition to the stability of the Michell XTP601 sensor, the insensitivity to mechanical shock is another advantage of the thermo-paramagnetic technology. As it relies solely upon fluctuations in magnetic fields, and not internal moving parts, the sensor will operate efficiently under a wide range of environmental conditions. It is suitable for installation where vibration or movement could pose a problem for other sensor types.

Flexible Packaging

The XTP601 is available in two configurations, both with the option of safe (GP) or hazardous (EX) area classification depending on the individual customer's needs — this allows the user to determine the price to feature ratio that best suits each installation.



XTP601 (EX1, GP1 or GP2)

The full display model provides a local HMI for the user to access all the functions of the analyzer through the glass via capacitance buttons. As well as displaying the oxygen concentration there is a status bar showing messages. The user can scroll through the front screens to see a graph of the latest period (user-defined), high & low oxygen points, reading from an external sensor and alarm history.



Application Software


The XTP601 analyzer is supplied with application software that will allow the user remote access to the unit. This includes displaying the oxygen concentration, alarms, graphs, changing parameters and even remote calibration.



XTP601 (EX3 or GP3)

The basic model is an oxygen transmitter that provides 4–20 mA outputs, alarm relays & RS485 serial communications. There is application software included that allows the user to visualize and interact with the unit from their PC or control system. There is an optional light guide that will indicate when the unit is powered up and/or in alarm condition.

Dimensions

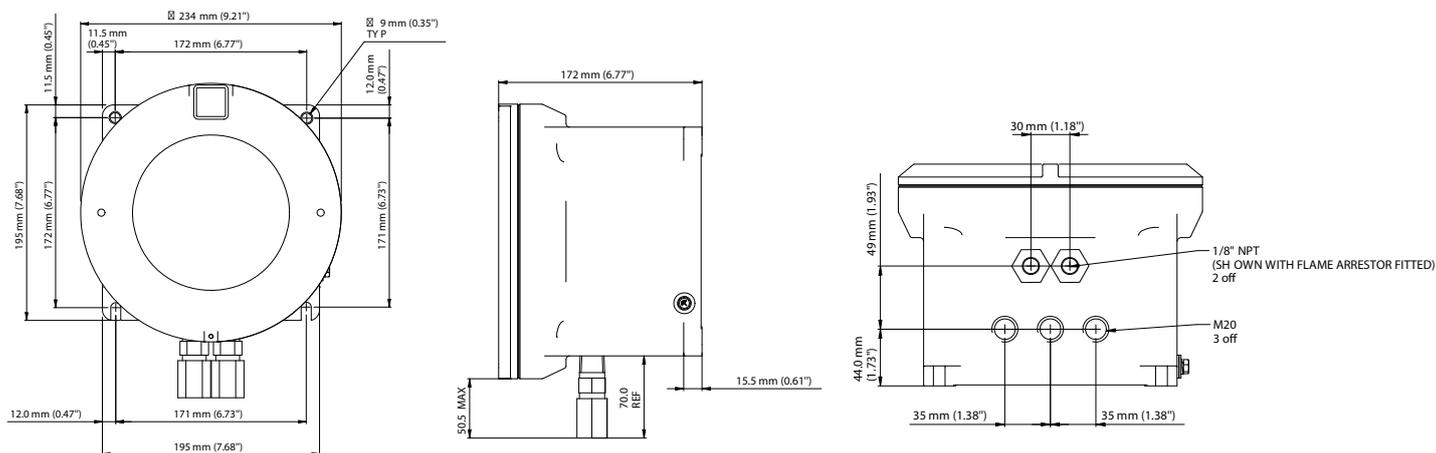

PS601 Premium Sample Handling System for the XTP601

For a long, trouble-free life, oxygen analyzers invariably require a clean, dry gas that is free from particulates and at a suitable temperature and pressure. In the real world, the process gas being measured almost never fulfils these requirements. Michell Instruments offers a complete solution for this problem: The XTP601 and PS601 Sample Handling System. This modular system is constructed in consultation with customers to ensure the best possible solution for each individual application.

Technical Specifications

Performance	
Measurement technology	Thermo-paramagnetic oxygen sensor
Gas	Process and non-condensing sample with particles <3µm
Measurement range	Selectable from 0–0.5% up to 0-50% and 20, 80 or 90–100%
Display resolution	0.01% for suppressed zero ranges
Display type	Backlit LCD
Accuracy (excluding suppressed zero ranges)	<±1% of span or ±0.02% O ₂ whichever is greater
Accuracy for suppressed zero ranges (80/90–100%)	<0.2% O ₂
Response time (T90) with high speed response (HSR) enabled	<15 seconds
Repeatability	±0.2% of span or 0.01% O ₂ whichever is greater
Linearity	±0.5% of span or 0.05% O ₂ whichever is greater
Zero stability	±0.25% of span per month
Span stability	±0.25% of span per month
Sample flow rate	GP1 and GP3: 100 to 500 ml/min EX1, EX3 and GP2: 270 to 330 ml/min
Sample pressure	0.75 to 5 BarA
Sample temperature	5 to +55°C max (+45°C) for standard cell)
Sample cell temperature	Standard +50°C (optional +55 and +60°C) for ranges 0-0.5% up to 0-50% only.)
Background gas	Analyzer is calibrated in the background gas of the process. Standard gases are: N ₂ , CO ₂ , CH ₄ , H ₂ & Biogas. Others available on request.
Electrical Specifications	
Analog inputs	2 off 4–20 mA inputs One for an external sensor that can be displayed on the screen One to act as an active compensation for the process conditions
Analog outputs	2 off 4–20 mA outputs (powered with 24V excitation voltage)
Output ranges	Primary range is set to the calibrated range of the instrument The second is user selectable 0-100%
Alarms	2 off single pole changeover (SPCO) relays for O ₂ concentration (250 V, 5 A max)
Datalogging	The user can use the digital communications to log the output from the analyzer The unit will store 40 alarm points and the min/max O ₂ concentrations with date and time stamp
Digital communications	Modbus RTU over RS485 Protocol
Power supply	24 V DC; 1.5 A max
Cable entries	Analyzer is supplied with 3 x M20 cable entries. Cable glands, conduit entries and blanking plugs are available as accessories.

Operating Conditions	
Ambient temperature	5 to +55°C
Atmopheric pressure	750mbar to 1250mbar
Mechanical Specifications	
Warm up time	<25 minutes
Stabilization time	5 minutes
Dimensions	234 x 234 x 172mm (w x d x h)
Weight	9.7kg
Wetted materials	316 & 430F stainless steel, borosillicate glass, platinum, 3M 2216 (plus o-ring)
O-Ring materials	Viton, Silicone or Ekraz
Gas connection	EX1, EX3 & GP2: 1/8" NPT (female) GP1 and GP3: 1/4" NPT (female)
Ingress protection	IP66, NEMA 4X
Hazardous Area Classification	
ATEX	II 2GD Ex d IIB+H2 T6 Gb Ex tb IIIC T85°C Db IP66
IECEX	Ex d IIB+H2 T6 Gb Ex tb IIIC T85°C Db IP66
CSA_{us}	Class I, Division 1, Groups B,C,D, T6
INMETRO	Ex d IIB+H2 T6 Gb Ex tb IIIC T85°C Db IP66
TC TR Ex	1 Ex d IIB+H2 T6 Gb
Temperature ranges for ATEX and IECEX as per o-ring type	Silicon: Ta = -40°C to +55°C Viton: Ta = -15°C to +55°C Ekraz: Ta = -10°C to +55°C

The XTP601 process oxygen analyzer meets or exceeds all relevant clauses in BS EN 50104 : 2010 "Electrical apparatus for the detection and measurement of oxygen".

Michell Instruments Ltd 48 Lancaster Way Business Park, Ely, Cambridgeshire, CB6 3NW
Tel: +44 (0) 1353 658000, Fax: +44 (0) 1353 658199, Email: uk.info@michell.com, Web: www.michell.com/uk

Michell Instruments adopts a continuous development programme which sometimes necessitates specification changes without notice.
Issue no: XTP601_97314_V6_UK_0518